


NOVA LUCE


9028855

1

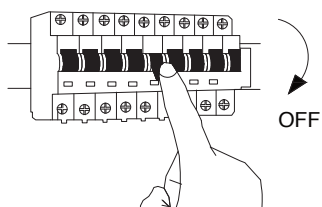


Turn off the general switch

2

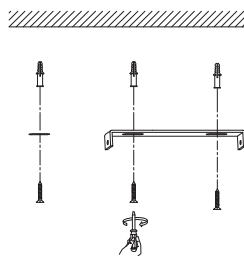


Drill holes & apply plastic anchors
With screws

3

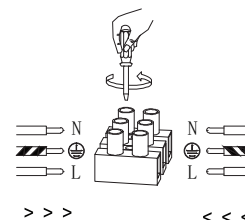


Connect the wires

4

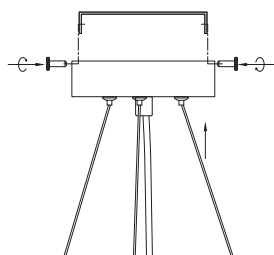


Apply the side screws

5

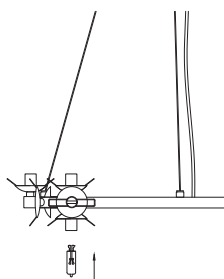


Apply the bulb

6

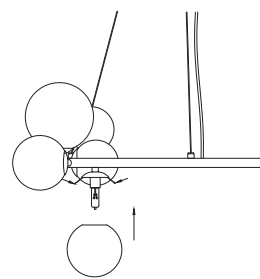


Apply the glass

7

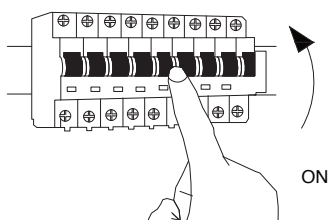

Turn on the general switch

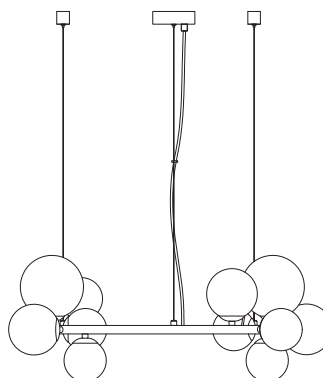

ALSO YOU CAN DO


www.novaluce.com



NOVA LUCE


9028855

1

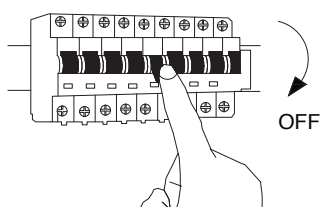


Turn off the general switch

2

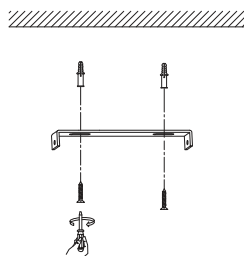


Drill holes & apply plastic anchors
With screws

3

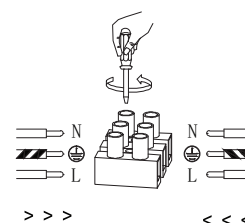


Connect the wires

4

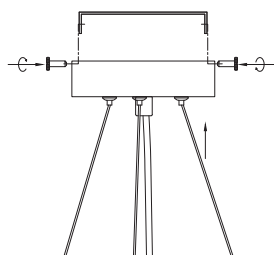


Apply the side screws

5

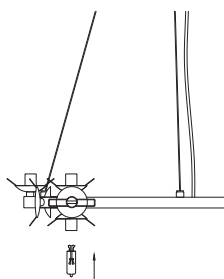


Apply the bulb

6

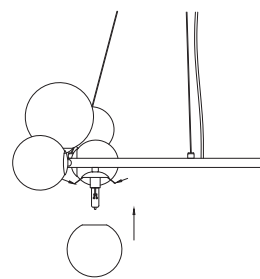

Apply the glass

7

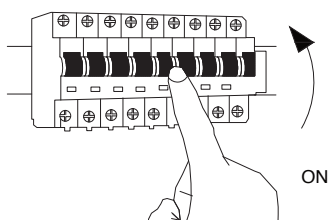

Turn on the general switch

