


# NOVA LUCE


9028856

1

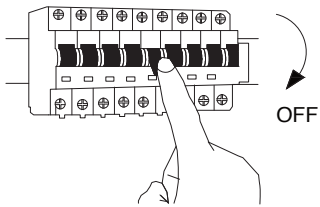


Turn off the general switch

2

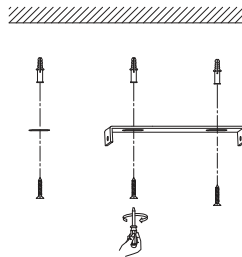


Drill holes & apply plastic anchors  
With screws

3

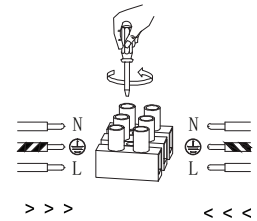


Connect the wires

4

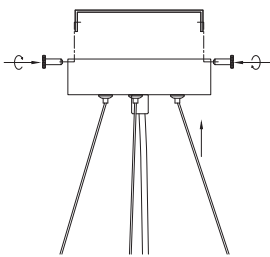


Apply the side screws

5

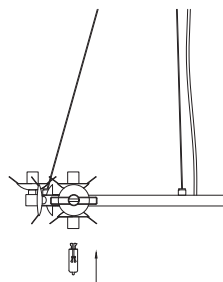


Apply the bulb

6

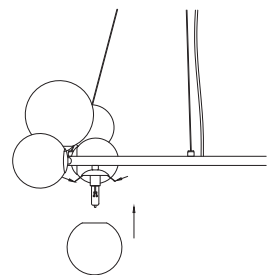


Apply the glass

7

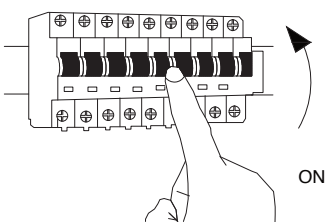

Turn on the general switch

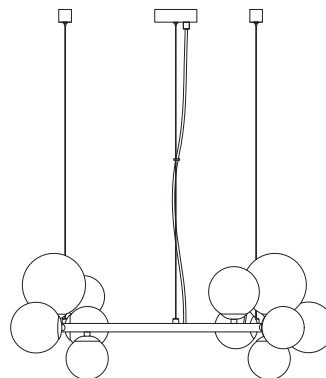

**ALSO YOU CAN DO**


[www.novaluce.com](http://www.novaluce.com)



# NOVA LUCE


9028856

1

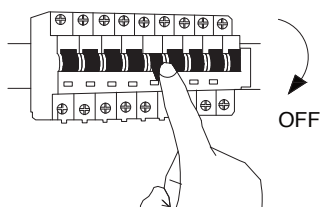


Turn off the general switch

2

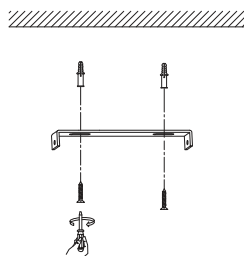


Drill holes & apply plastic anchors  
With screws

3

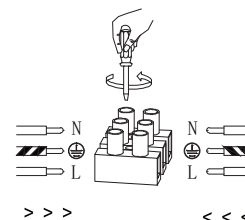


Connect the wires

4

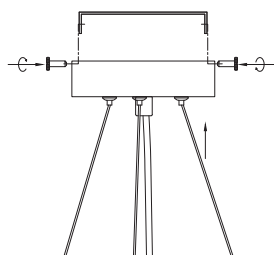


Apply the side screws

5

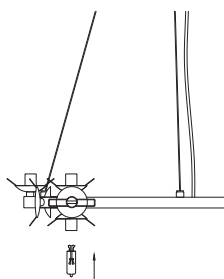


Apply the bulb

6

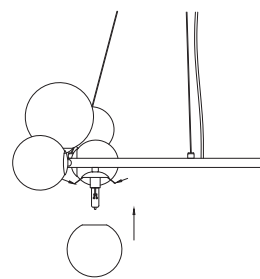

Apply the glass

7

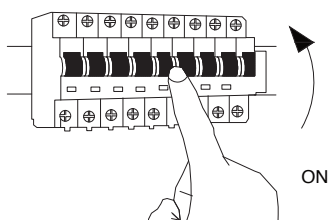

Turn on the general switch

